

ON/OFF Function



Press **ON Button**



Turn On the unit

Press **OFF Button**



Turn Off the unit

FLASH Function



Press **FLASH Button** (Original Speed)

The unit will change colors.

To change the colors step speed press
Up/Down Button

Press **UP Button**



(High speed)

Press **DOWN Button**



(Low speed)



FADE Function



Press **FADE Button** (Original Speed)

The unit will change colors in cross fade mode.

To change the speed press Up/Down Button



Press **UP Button**  (High speed)

Press **DOWN Button**  (Low speed)

MUSIC1



Function

Press  Button

To Activate the Light: Organ function of the unit (>70dB)

In this function the unit will not show any light when music beats not present.



You are able to control the unit Brightness by pressing the UP/DOWN Button

Press UP Button  (Increasing the brightness in 10 step)

Press DOWN Button  (Decreasing the brightness in 10 step)



MUSIC2



Function



Press  Button

To activate the Sound Sensitive Function – where the light will change colors to the beat of music (>70dB)

If sound beat is not present the unit will go into Cross Fade Mode.

You are able to control the unit Brightness by pressing the UP/DOWN Button



Press UP Button  (Increasing the brightness in 10 step)

Press DOWN Button  (Decreasing the brightness in 10 step)

Single Color Function



Single **Color Button**

Press any of the fixed preset Color Button – the unit will change to that color.

You are able to control the unit Brightness by pressing the UP/DOWN Button



Press **UP Button**  (**Increasing the brightness in 10 step**)

Press **DOWN Button**  (**Decreasing the brightness in 10 step**)

Note:

If you press any of the fixed color buttons while you are in any of the Flash, Fade or Music Functions, it will exit you from that function.